

ECS332 2018/1 Part III.3 Dr.Prapun

8 PCM

8.1. Generally, **analog** signals are continuous in time and in range (amplitude); that is, they have values at every time instant, and their values can be anything within the range. On the other hand, **digital** signals exist only at discrete points of time, and their amplitude can take on only finitely (or countably) many values.

8.2. Suppose we want to convey an *analog* message $m(t)$ from a source to our destination. We now have many options.

- (a) Use $m(t)$ to modulate a carrier $A \cos(2\pi f_c t)$ using AM (Defn. 4.61), FM (Defn. 5.15), or PM (Defn. 5.3) techniques studied earlier.
- (b) **Sample** the continuous-time message $m(t)$ to get a discrete-time message $m[n]$:

$$m(t) \rightarrow \boxed{\text{Sampler}} \rightarrow m[n]$$

- May LPF $m(t)$ before sampling to eliminate aliasing (and reduce out-of-band noise).
 - Need to make sure that the sampling rate f_s is fast enough.
- (i) Send $m[n]$ using **analog pulse modulation** techniques (PAM, PWM, PPM) illustrated in Example 7.5.
 - Note that $m[n]$ is a sequence of numbers. Even when $m(t)$ (and hence $m[n]$) is bounded, there are uncountably many possibilities for these numbers. They lie in a continuous dynamic range.

- Therefore, information is transmitted basically in analog (not digital) form but the transmission takes place at discrete times.
- (ii) In **digital pulse modulation**, $m[n]$ is represented by a (discrete) number (symbol) selected from a finite alphabet set.
- i. In **Pulse Code Modulation (PCM)**, we further **quantize** $m[n]$ into m_n which has finitely many levels. Then, convert m_n into binary sequence represented by two basic pulses.

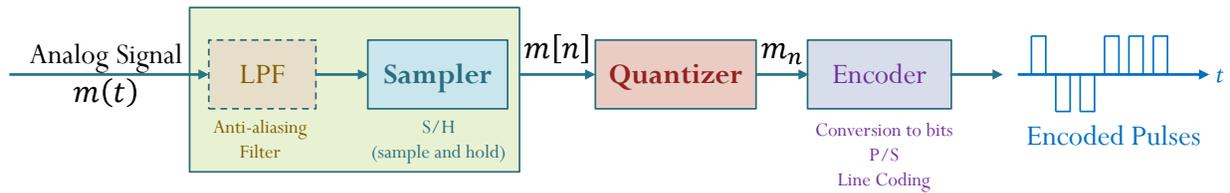


Figure 71: PCM System Diagram

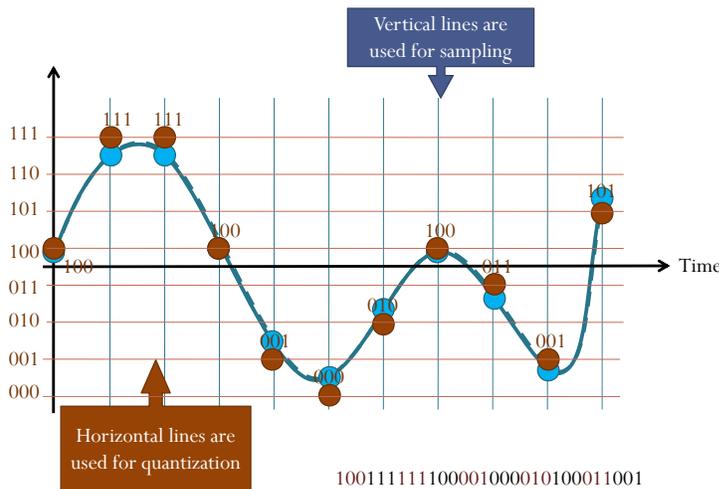


Figure 72: An overview of PCM

- ii. There are also other forms of “source coding” such as DPCM and DM.

Definition 8.3. Pulse-code modulation (PCM) is a discrete-time, discrete-amplitude waveform-coding process, by means of which an analog signal is directly represented by a sequence of coded pulses.

8.4. Advantages of PCM

- (a) **Robustness** to channel noise, distortion, and interference
- assuming these corruptions are within limits.
 - With analog messages, on the other hand, any distortion or noise, no matter how small, will distort the received signal.
- (b) Efficient regeneration of the coded signal along the transmission path by using regenerative **repeaters**.
- For analog communications,
 - A message signal becomes progressively weaker as it travels along the channel, whereas the cumulative channel noise and the signal distortion grow progressively stronger.
 - Ultimately the signal is overwhelmed by noise and distortion.
 - Amplification offers little help because it enhances the signal and the noise by the same proportion.
 - Consequently, the distance over which an analog message can be transmitted is limited by the initial transmission power.
 - For digital communications,
 - We can set up repeater stations along the transmission path at distances short enough to be able to detect signal pulses before the noise and distortion have a chance to accumulate sufficiently.
 - At each repeater station the pulses are detected, and new, clean pulses are transmitted to the next repeater station, which, in turn, duplicates the same process.
- (c) Digital signals can be **coded** to remove redundancy, protect against channel corruption, and provide privacy.

8.5. PCM has emerged as the most favored scheme for the digital transmission of analog information-bearing signals (e.g., voice and video signals). [4, p 267]

- The method of choice for the construction of public switched telephone networks (PSTNs).

8.6. Technically, the term “modulation” used in PCM, DPCM, and DM is a misnomer. In reality, PCM, DPCM, and DM are different forms of source coding. [4, p 277]

8.1 Uniform Memoryless Quantization

Definition 8.7. Through **quantization**, each sample value $m[n]$ is transformed to (, e.g., approximated, or “rounded off,” to the nearest) **quantized level** [6, p 320] or **quantum level** [3, p 545] (permissible number) taken from a finite alphabet set \mathcal{M} .

8.8. Sampling vs. Quantization:

- (a) Sampling operates in the time domain. Quantization operates in the amplitude domain.
- (b) The sampling process is the link between an analog waveform and its discrete-time representation. The quantization process is the link between an analog waveform and its discrete-amplitude representation.

Definition 8.9. Suppose the range of the quantizer is $(-m_p, m_p)$.

- Note that, here, m_p is not necessarily the peak value of $m(t)$. The amplitudes beyond $\pm m_p$ will be simply chopped off.

A simple (memoryless) quantizer partitions the range into L intervals. Each sample value is approximated by the midpoint of the interval in which the sample value falls.

- Each sample is now represented by one of the L numbers.
- Such a signal is known as an L -ary digital signal.

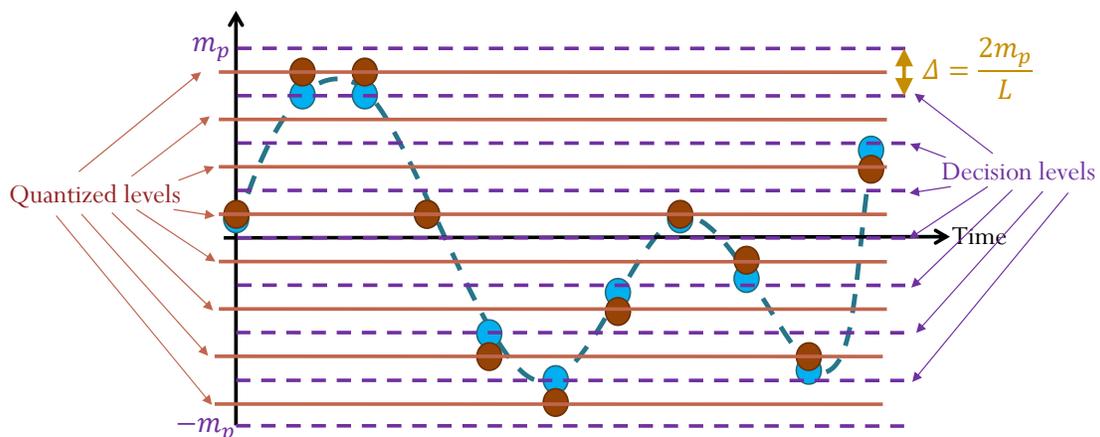


Figure 73: Quantized levels

- The length of each interval is denoted by $\Delta = \frac{2m_p}{L}$.
- Because the quantized levels are uniformly spaced, we say that the quantizer is **uniform**.

8.10. Quantization introduces permanent errors that appear at the receiver as quantization noise in the reconstructed signal.

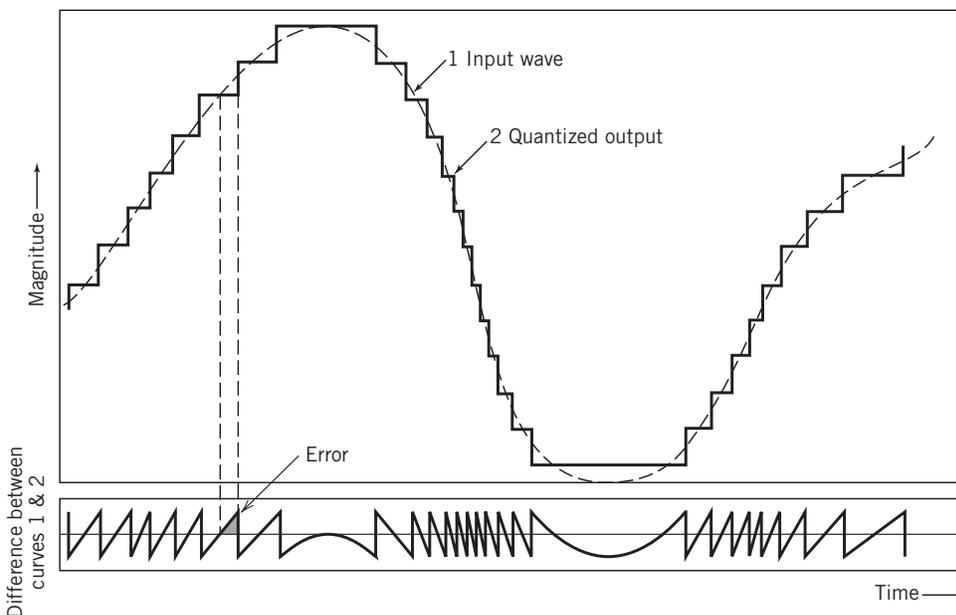


Figure 74:
Error in the
quantized out-
put [4, Fig.
6.10].

Let $q[n] = m[n] - m_n$ be the quantization error for the n th sample. If the step size Δ is sufficiently small (i.e., L is sufficiently large) and $m[n]$ is bounded by $(-m_p, m_p)$, it is reasonable to assume that the quantization error is uniformly distributed on $[-\frac{\Delta}{2}, \frac{\Delta}{2}]$.

Assuming that the sampling is done with sampling rate f_s that is fast enough ($> 2B$). Then, we know, from the reconstruction equation (77), that

$$m(t) = \sum_{n=-\infty}^{\infty} m[n] \text{sinc}(\pi f_s(t - nT_s)). \quad (82)$$

With quantization, the sequence m_n is transmitted instead of $m[n]$. Hence, at the receiver, the reconstructed signal is

$$\hat{m}(t) = \sum_{n=-\infty}^{\infty} m_n \text{sinc}(\pi f_s(t - nT_s)). \quad (83)$$

The distortion component in the reconstructed signal, which is referred to as the **quantization noise**, is

$$q(t) = m(t) - \hat{m}(t).$$

One can then show that the average power of the quantization noise is

$$P_q = \mathbb{E} [(m[n] - m_n)^2] = \mathbb{E} [q^2[n]] = \frac{\Delta^2}{12} = \frac{m_p^2}{3L^2}. \quad (84)$$

So, the signal-to-(quantization)-noise power ratio (SNR or SQNR) is

$$\text{SNR} \equiv \frac{P_m}{P_q} = \frac{12P_m}{\Delta^2} = \frac{3L^2P_m}{m_p^2}. \quad (85)$$

This is an indication of the quality of the received signal. We want SNR to be large.

8.11. Sinusoidal Modulating Signal: For sinusoidal signal $m(t)$ with amplitude A , its power is $P_m = \frac{1}{2}A^2$ and therefore,

$$\text{SNR} = \frac{12P_m}{\Delta^2} = \frac{12 \left(\frac{1}{2}A^2\right)}{\Delta^2} = \frac{6A^2}{\Delta^2} = 10\log_{10} \left(\frac{6A^2}{\Delta^2} \right) \text{ [dB]}. \quad (86)$$

8.12. Full-Load Sinusoidal Modulating Signal: If the sinusoidal $m(t)$ fully covers the whole range of the quantizer, we have $A = m_p$, $P_m = \frac{1}{2}m_p^2$ and

$$\text{SNR} = \frac{3L^2P_m}{m_p^2} = \frac{3L^2 \left(\frac{1}{2}m_p^2\right)}{m_p^2} = 1.5L^2 = 10\log_{10} (1.5L^2) \text{ [dB]}. \quad (87)$$

8.13. As mentioned earlier, in PCM, the quantized samples are coded and transmitted as binary pulses. At the receiver, some pulses may be detected incorrectly. Hence, there are two sources of error in this scheme:

- (a) quantization error
- (b) pulse detection error

In almost all practical schemes, the pulse detection error is quite small compared to the quantization error and can be ignored. [6, p 322]

8.14. The quantization error can be reduced as much as desired by increasing the number of quantizing levels, the price of which is paid in an increased required transmission bandwidth. See (89).

8.2 Pulse Coding

8.15. From practical viewpoint, a **binary** digital signal (a signal that can take on only two values) is very desirable because of its simplicity, economy, and ease of engineering. We can convert an L -ary signal into a binary signal by using **pulse coding**.

- A **binary digit** is called a bit.
- $L = 2^\ell$ levels can be mapped into (represented by) ℓ bits.

Example 8.16. In Figure 72, $L = 8$. The binary code can be formed by the binary representation of the 8 decimal digits from 0 to 7; that is we assign the word 000 to the lowest level and progresses upward to 111 in the natural order of binary counting. This “natural” code is also known as “offset binary code”.

Example 8.17. Telephone (speech) signal:

- The components above 3.4 kHz are eliminated by a low-pass filter.
 - For speech, subjective tests show that signal intelligibility is not affected if all the components above 3.4 kHz are suppressed.
- The resulting signal is then sampled at a rate of 8,000 samples per second (8 kHz).
 - This rate is intentionally kept higher than the Nyquist sampling rate of 6.8 kHz so that realizable filters can be applied for signal reconstruction.
- Each sample is finally quantized into 256 levels ($L = 256$), which requires eight bits to encode each sample ($2^8 = 256$).

[6, p 320]

Example 8.18. Compact disc (CD) audio signal:

- High-fidelity: Require the audio signal bandwidth to be 20 kHz.
- The sampling rate of 44.1 kHz is used.
- The signal is quantized into $L = 65,536$ of quantization levels, each of which is represented by 16 bits (16-bit two's complement integer) to reduce the quantizing error.

[6, p 321]

8.19. The SNR for the full-load sinusoidal modulating signal discussed in 8.12 is then

$$\text{SNR} = 1.5 (2^{2\ell}) = 10\log_{10}1.5 + 2\ell \underbrace{10\log_{10}2}_{\approx 3} \text{ [dB]} \approx 1.76 + 6\ell \text{ [dB]}. \quad (88)$$

8.20. Recall, from 7.33, that a maximum of $2B$ independent pieces (symbols) of information per second can be transmitted, errorfree, over a noiseless channel of bandwidth B Hz. In other words, one can send at most 2 [Sa/s/Hz]. This is achieved by using the sinc pulse train. Here, because we use binary coding, one symbol is the same as one bit. Therefore, for PCM, one can send at most 2 [b/s/Hz]. Equivalently, if the bit rate is R_b [bps], the minimum required baseband transmission bandwidth is

$$\frac{R_b}{2} = \frac{f_s \ell}{2} \geq \frac{2B\ell}{2} = \ell B. \quad (89)$$

8.3 Line Coding

8.21. The last signal-processing operation in the transmitter is that of line coding, the purpose of which is to represent/convert sequence of bits by/into a sequence of (electrical) pulses.

8.22. Figure 75 depicts various **line codes** for the binary message 10110100, taking rectangular pulses for clarity.

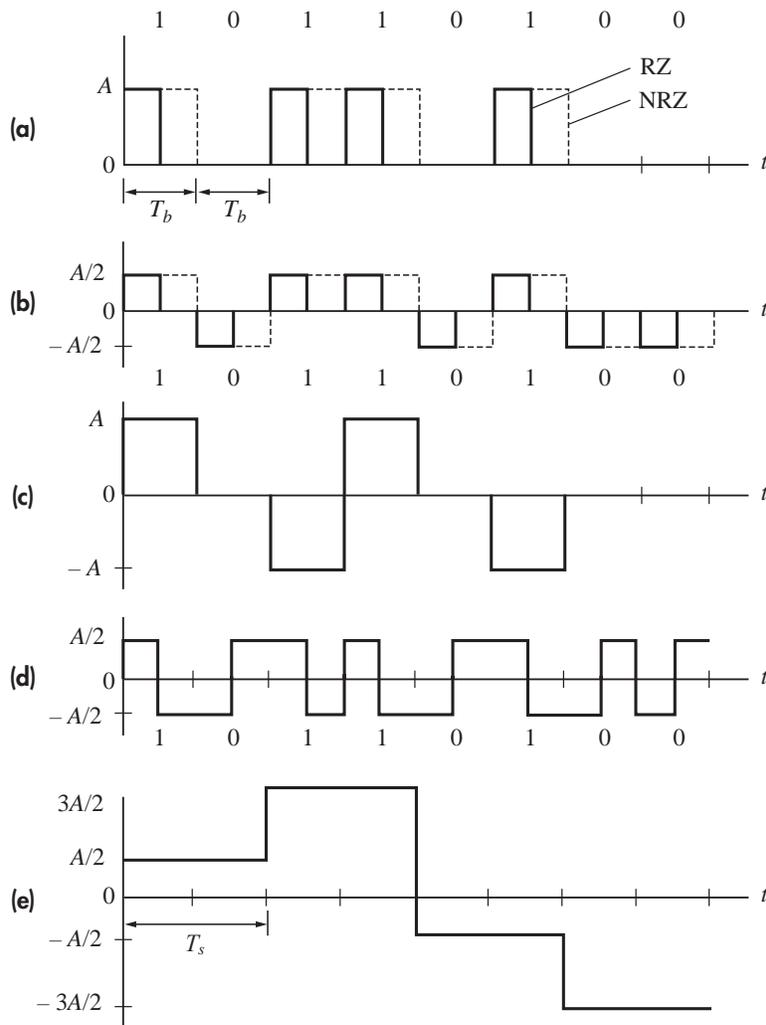


Figure 75: Line codes with rectangular pulses: (a) unipolar RZ and NRZ; (b) polar RZ and NRZ; (c) bipolar NRZ; (d) split-phase Manchester; (e) polar quaternary NRZ. [3, Fig 11.1-1 p 483]

Definition 8.23. The simple **on-off waveform** in Figure 75a represents each 0 by an “off” pulse and each 1 by an “on” pulse.

- (a) In the (unipolar) **return-to-zero (RZ)** format, the pulse duration is smaller than T_b after which the signal return to the zero level.

- (b) A (unipolar) **nonreturn-to-zero (NRZ)** format has “on” pulses for full bit duration T_b .

Definition 8.24. The **polar signal** in Figure 75b has opposite polarity pulses

- Its DC component will be zero if the message contains 1s and 0s in equal proportion.

Definition 8.25. Figure 75c, we have **bipolar signal** where successive 1s are represented by pulses with alternating polarity.

- Use three amplitude levels
- Also known as pseudo-ternary or alternate mark inversion (AMI)

Definition 8.26. The split-phase or **Manchester** format in Figure 75d represents 1s with a positive half-interval pulse followed by a negative half-interval pulse, and vice versa for the representation of 0s.

- Also called twinned binary.
- Guarantee zero DC component regardless of the message sequence.

Definition 8.27. Figure 75e shows a **quaternary signal** derived by grouping the message bits in blocks of two and using four amplitude levels to represent the four possible combinations 00, 01, 10, and 11.

- Quaternary coding can be generalized to **M -ary coding** in which blocks of n message bits are represented by an M -level waveform with $M = 2^n$.